


SOAXC, ASAP to X-Series Connector Instructions

Kit Contents

- Vinyl Connector
- Floor Joining Strip
- Insulation Connector
- Carry bag

Shelter Alignment

1. Remove the facing end walls from the shelters that will be connected to each other.
2. Align the shelters so that the frames are roughly 10" apart and the peaks are coincident along a center line through each shelter.

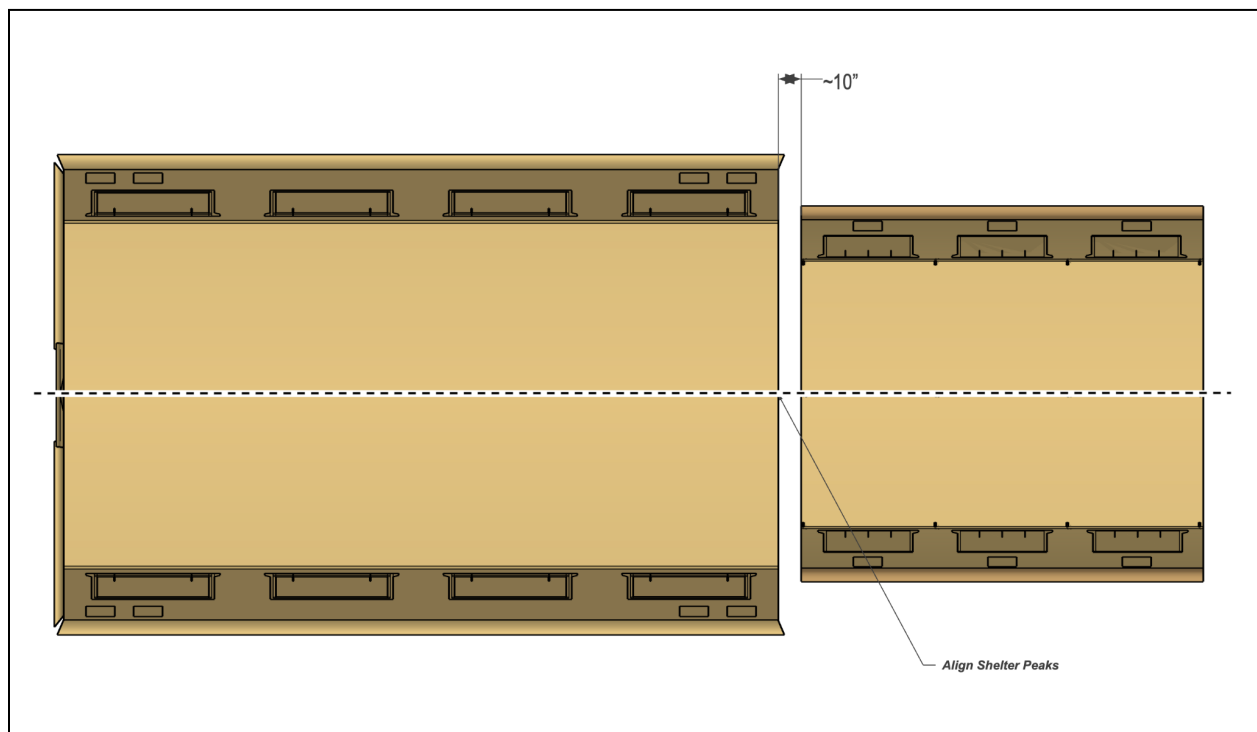

3. Make sure both shelters are properly secured using stakes or Atlas® Anchors
4. Create the tucked floor corners on both shelters as normal according to the ASAP® and X-Series shelter instructions.

Vinyl Connector Installation

5. Retrieve the vinyl connector from the carry bag
6. Locate the grommeted tab showing. This tab marks the center peak of the X-Series side of the connector.
7. Pull the roof off of the frame post and place the grommet tab from the connector on to the post.



8. Pull the roof back on to the frame post and secure it with the pin.

9. Begin attachment starting at the center peak and work along the perimeter until all hook and loop is connected.
10. Pull the awning flap so that it is sitting on top of the roof of the ASAP® shelter.




11. Repeat hook and loop connection process on the ASAP® side of the connector.
This is most easily completed by working from the inside of the shelter starting at the peak and moving out along the perimeter until all hook and loop is connected.
12. Arrange the base skirts so that the skirt from the connector is on top of the ASAP® skirt.

For best weather and vector resistance results, DLX recommends using sandbags around the entire perimeter of the shelters to prevent water, debris, wind, or vector organisms from entering the shelter under the skirt.

Floor Joining Strip Installation

13. Retrieve the floor joining strip (orange and gray) from the carry bag.
14. Start on one side of the shelter connection and push the ASAP® flooring underneath the X-Series flooring.
15. Align the joining strip so that it butts up against the frame hub of the ASAP®.

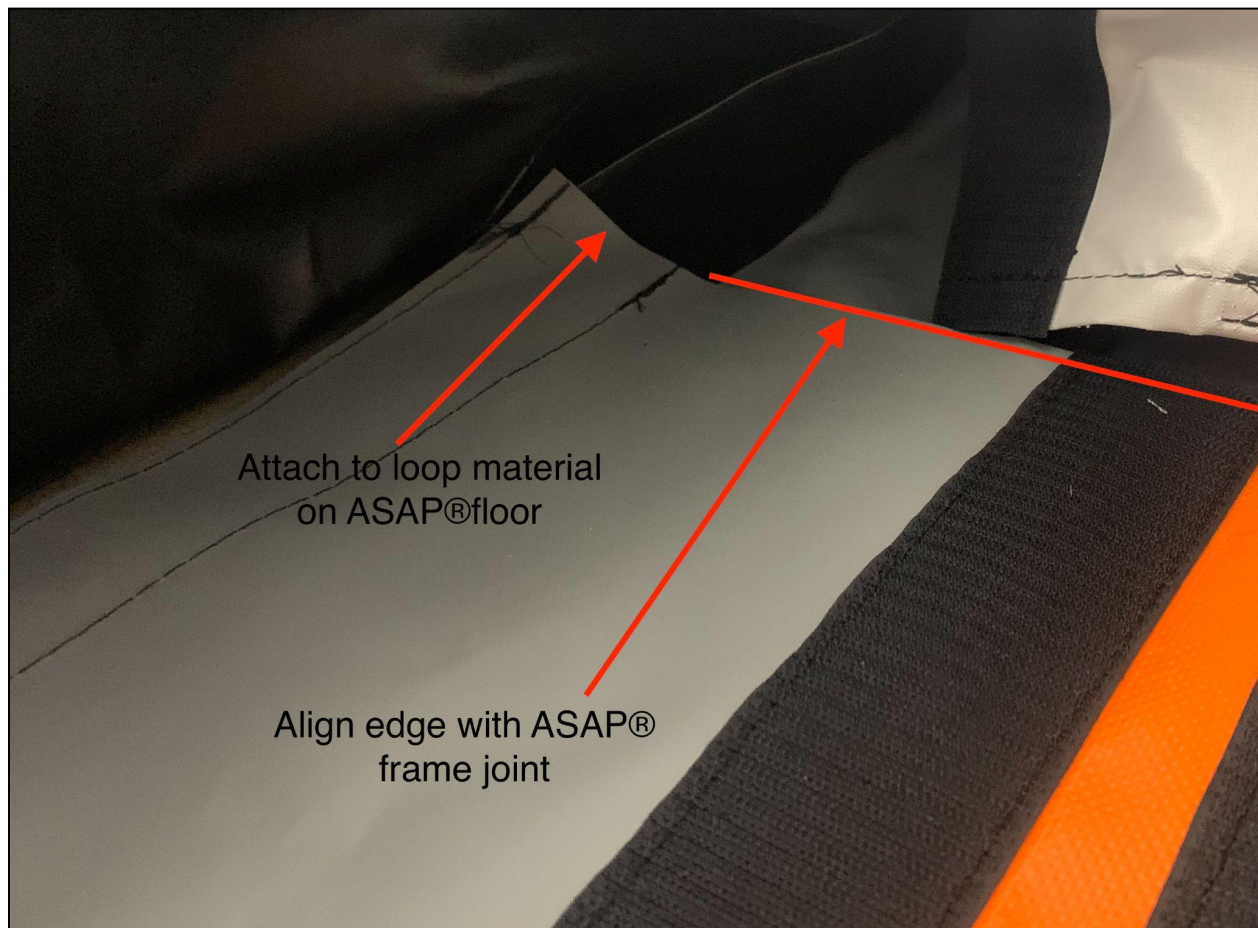


16. Lift up the X-Series flooring and attach the hook material onto the face(gray side) of the ASAP® flooring. Complete this connection all the way down the entire width of the flooring.
17. Lay the X-Series floor down so that the backside (Black) loop material connects to the inner run of hook material on the orange portion of the joining strip.



18. Fold the outer run of hook material up and over to sandwich the X-Series Floor in the orange portion of the joining strip.

Insulation Connector

19. Retrieve the insulation connector from the carry bag
20. Locate the orange tabs showing “X-Series” and “ASAP®”. These tabs mark the center/peak of the connector on both sides.

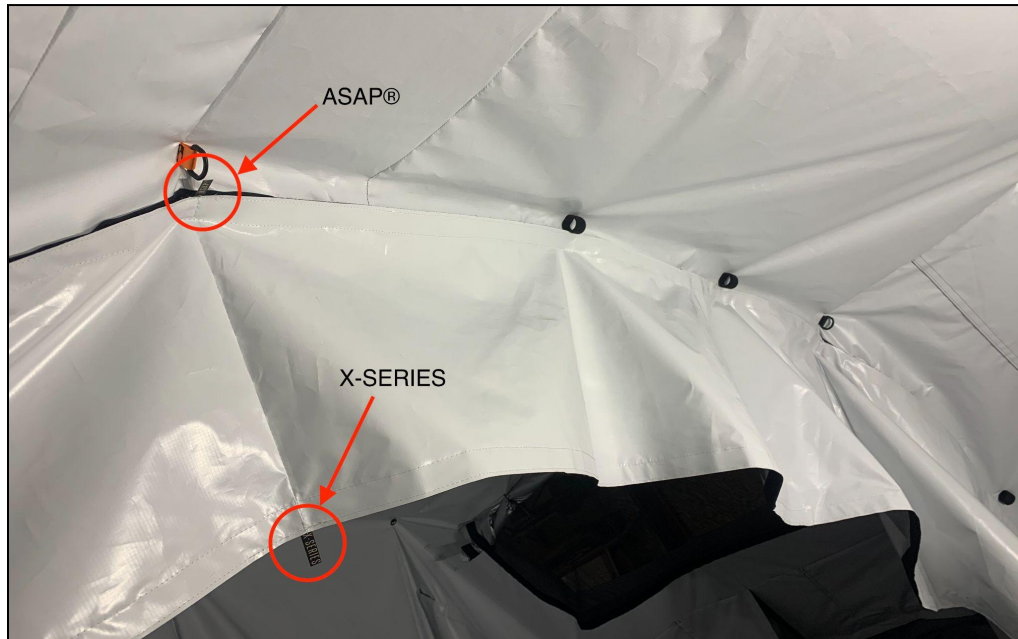

21. Begin attachment on the ASAP® side starting at the center peak and work along the perimeter until all hook and loop is connected.
22. Repeat hook and loop connection process on the X-Series side of the connector. Start at the peak and work out along the perimeter until all hook and loop is connected.



23. Attach the base of the insulation connector to the flooring of the X-Series shelter



For any Questions or Troubleshooting, please contact your DLX Sales Ambassador or the Support team at (541) 357-5978